
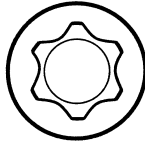
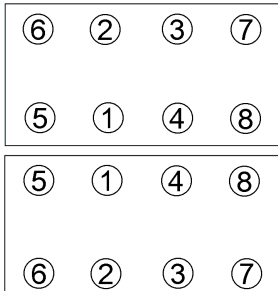


<b>Anziehvorschrift für Zylinderkopf</b>		<b>548.906</b> passend für / suitable for adaptable à / adaptable a  <b>Mercedes-Benz</b>	 <b>Das Original</b>	
<b>Tightening Instructions for Cylinder Head</b>				
<b>Instructions de serrage pour culasse</b>				
<b>Prescripciones de apriete para culatas</b>				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
372.940 M 12x1,75x205				
Anziehen/ Tightening/ Serrage/ Apriete		M8 20 Nm		
* M12 10 Nm 60 Nm ➤ 90° ➤ 90° ➤ 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
<b>Motortyp / Engine type / Type de moteur / Tipo de motor</b>				
Ø 84,1 / 1,2 mm links/left/gauche/izquierda/sin				
Mot: OM 642.852, 858 300/350 CDI/BlueTEC				
C218, W212, S212, X218				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			<b>*548.906*</b>	